


# How to Set-Up Your DIGI-DAY® 2 Electronic Scoreboard

Follow these step-by-step instructions to set-up your digital display

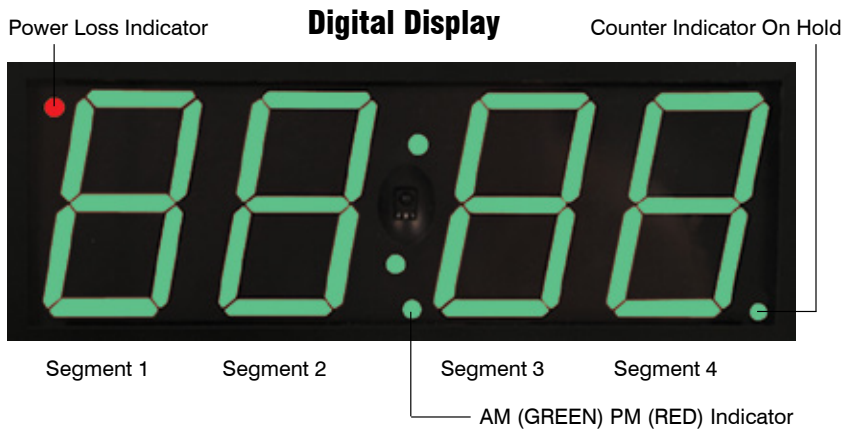

## Remote Control

Replacement Part No.  
**SCG444\***

All Digital Display functions require the use of the handheld Remote Control.

\*The Remote Control is encoded to the Digital Display. Please refer to the last letter code listed on the Digital Display when ordering replacement or additional remote control.

## Power Loss Indicator

In the event of a power loss, the display will go dark, yet will hold in memory the Number of Days, Date and Time. When power is restored, there will be an LED indicator on the upper left and the complete display will be red. The display will resume normal operations – though, time shifted back by the amount of time power was off. To verify (and reset) the time of day, remove power loss indicator, and return the display back to green, follow procedures in “Set the Time of Day”.

## Counter Indicator On Hold

To freeze or pause the number of count days, press the remote “Hold” red button. There will be an LED indicator on the lower right, and the count will hold or freeze. To resume function, press remote “Hold” button. LED indicator will turn off.

### Step 1 Verify Count-Up Function

Your Digi-Day® display has the ability to count-up OR count-down.

- **Press remote gray “Up/Down” button once** to verify the correct mode. In display segment 1, the horizontal bar is to be at the top for “Count-Up” mode, or at the bottom for “Count-Down” mode.
- After verifying, **on the remote, press the black Enter button.**



Display shown in Count-Up mode



Display shown in Count-Down mode

### Step 2 Set the Number of Count Days

- **Press remote green “Count Days” button.** First segment number will flash.
- **Press remote’s green numbered buttons** to enter desired number of days. As each number is entered, the next segment will flash.
- After entering numbers, **press the black Enter button.**

Example: 365 days – Enter 0-3-6-5 for number of count days. **Press the black Enter button.**

*Note: the leading zero(s) will not appear during operation.*



### Step 3

## Set Count Day to Change and Be Green

- **Press remote green "Green Day" button.** First segment number will flash.
- **Press remote's green numbered buttons** to enter desired number Count Day to turn green (and subsequent numbers will always be green). As each number is entered, the next segment will flash.
- After entering numbers, **press the black Enter button.**

Example: 10 days – Enter 0-0-1-0 for number of Count Day to change to green. **Press the black Enter button.**

*Note: the leading zero will not appear during operation. Count Day(s) less than this number will be red.*



In this Example, Count Day 1 thru 9 will display in red. On Count Day 10 and beyond the display will be in green.



### Step 5

## Set the Time for Number of Count Days to Change

- **Press remote green "Count Time" button.** Top colon dot appears and first segment number will flash. Display operates on 12-hour clock.
- **Press remote green "Count Time" button** again to select AM and PM – bottom center LED indicator is green for AM and red for PM.
- **Press remote's green numbered buttons** to enter desired time. As each number is entered, the next segment will flash. After entering time, **press the black Enter button.**

Example: 11:59 PM time – **press the remote green "Count Time" button** to turn LED indicator at the bottom center to be red, then enter numbers 1-1-5-9 for time for number of count days to change. **Press the black Enter button.**



## Set Actual Date and Work Days

### ACTUAL DATE

- **Press remote green "Calendar symbol" button.** Year will appear and first segment will flash.
- **Press remote's green numbered buttons** to enter desired year. As each number is entered, the next segment will flash. After entering year, **press the black Enter button.** Actual month and day-date will appear with bottom colon dot, and first segment number will flash.
- **Press remote's green numbered buttons** to enter desired month and date. As each number is entered, the next segment will flash. After entering the month and date, **on the remote, press the black Enter button**
- Setting Work Days mode will appear.

*Note: The Digi-Day®2 display is preset to operate as a continuous counter 7 days a week, 365 days a year. To verify setting, press remote "Calendar symbol" button, then **press remote Enter black button** three times to get to the Days Counter display, which should say 7. **Press the black Enter button.***



*Note: Safe days counter doesn't account for holidays or adjust time for daylight savings time. Please update the display when the holiday and time change occurs.*

### Step 4

## Set the Time of Day

- **Press remote green "Actual Time" button.** Colon dots appear and first segment number will flash. Display operates on 12-hour clock.
- **Press remote green "Actual Time" button** again to select AM and PM - bottom center LED indicator is green for AM and red for PM.
- **Press remote's green numbered buttons** to enter desired time. As each number is entered, the next segment will flash. After entering time, **press the black Enter button.**

Example: 9:15 AM time – **press the remote green "Actual Time" button** to turn LED indicator at the bottom center to be green, then enter numbers 0-9-1-5 for actual time of day. **Press the black Enter button.**

*Note: the leading zero will not appear during operation. During operation, when it is PM, the bottom center LED indicator will be red.*



### Step 6

## Display Formats

### TO DISPLAY:

- **NUMBER OF COUNT DAYS ONLY** – **Press remote gray "Days" button. Press the black Enter button.** This displays only the Count Days
- **DATE ONLY** – **Press remote gray "Date" button. Press the black Enter button.** This displays only the Month.Day.
- **CLOCK ONLY** – **Press remote gray "Clock" button. Press the black Enter button.** This displays only the Actual Time.
- **ALL** – **Press remote gray "All" button. Press the black Enter button.** This displays Number of Count Days, Date (month.day), and Actual Time in sequence each for 10 seconds.



Count Days Only



Date Only



Clock Only

### WORK DAYS

Some workplace operations may only want to count actual work days they are open, i.e. they may be open 5 days and closed 2 days. Digi-Day®2 can count number of open days and non-count number of closed days.

- **Press remote's green numbered buttons** to enter the month and date for first day of the work days per week. **Press the black Enter button.** You will now be in the Days Counter display per week.
- **Press remote's green numbered buttons** choice 1 to 7, afterwards the number will flash. **Press the black Enter button.** This is to set the specific number of work days per week.

*Note: Work Days start date must be set on same actual date or advance of the current date.*

*Note: If no numbers (year, dates) to enter, **press the black Enter button** to move through the various displays.*

Example: November 18 is the first day of the 5-day work – for only counting the work days. Enter number 1-1-1-8, **press the black Enter button**, enter number 5, **press black Enter button.**



Days Open